

ECLIPSEFS

DMX CONTROL

Channel													FUNCTION	DMX Value	
Tun	3200K	5400K	6500K	1CH	2CH	3CH	RGB	4CH RGLB	5CH	5CH RGLB	8CH	13CH			
1	1	1	1	1	1	1			1	1	1	1	Dimmer Dimmer(Close to Open)	000 - 255	
									2			2	Dimmer fine Dimmer fine 0->100%	000 - 255	
					2	2				3			CTC Preset 2000K 2000K->2700K 2700K->3200K 3200K->4200K 4200K->5600K 5600K->8000K 8000K->10000K	000 - 022 023 - 057 058 - 090 091 - 139 140 - 185 186 - 234 235 - 255	
									4				CTC Fine CTC Fine	000 - 255	
2							1	1		2	2	3	Red Red 0->100%	000 - 255	
												4	Red fine Red fine 0->100%	000 - 255	
3							2	2		3	3	5	Green Green 0->100%	000 - 255	
												6	Green fine Green Fine 0->100%	000 - 255	
4							3	3		4	4	7	Blue Blue 0->100%	000 - 255	
												8	Blue fine Blue Fine 0->100%	000 - 255	
5								4		5	5	9	Lime Lime 0->100%	000 - 255	
												10	Lime fine Lime Fine 0->100%	000 - 255	
											6	11	CTC Preset No function 2000K->2700K 2700K->3200K 3200K->4200K 4200K->5600K 5600K->8000K 8000K->10000K	000 - 022 023 - 057 058 - 090 091 - 139 140 - 185 186 - 234 235 - 255	
											7	12	Shutter Function Normal Shutter Functions Strobe effect slow to fast	000 - 003 003 - 255	
						3				5		8	13	Dimmer Fade 0->100%	000 - 255